

CASTLE PLAY TENT

Care & Safety Information +
Set-Up & Storage Instructions



Includes 1 Play Tent & 4 Poles

PLEASE READ BEFORE SETTING UP.

KEEP THESE INSTRUCTIONS FOR
FUTURE REFERENCE.

ADULT SET UP REQUIRED.

Questions or Comments?
ChuckleAndRoar.com

CHUCKLE
& ROAR

AGES
3+

SAFE PLAY: SAFETY INFORMATION

We care greatly about the safety of you and your children. We have put much care and effort into creating this product with quality materials to be safe, fun, and durable, and have also assembled this list of precautions to ensure your safety.




READ ALL INSTRUCTIONS PRIOR TO USING THIS PRODUCT.


- Adult assembly and storage required.
- Child(ren) should be supervised at all times.
- Keep product away from open flames.

SAFE PLAY: TENT SET UP

1. Remove tent from box and plastic bag.
Keep the box for storage.

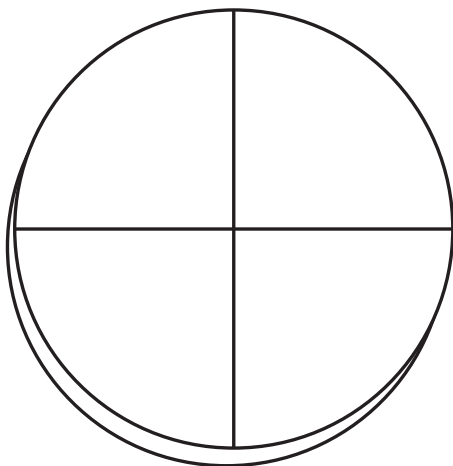

2. Unravel tent so it is one big, flat circle.

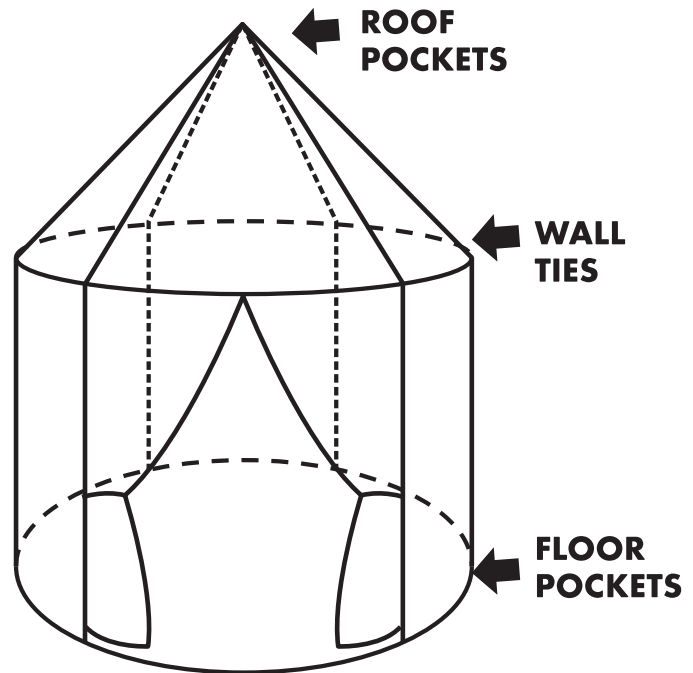


3. Before proceeding, take the time to locate the pockets on the inside of the roof, the **4** white nylon pockets along the bottom, and the **4** ties where the roof meets the walls. *Each roof pocket will align with one tie and one floor pocket.*


WATCH IT GLOW!

To activate the glow feature, expose the tent to light (direct sunlight is best) for a couple of hours to charge it. Switch the lights off to watch it glow! Stars will glow bright then fade over time. Glow lasts about 15 minutes.


SAFE PLAY: TENT SET UP

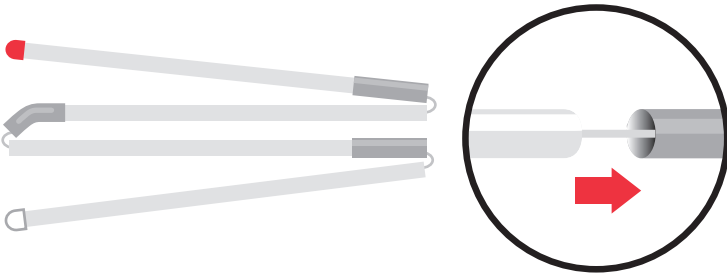


4. Next, assemble the poles by fitting the tube into the metal joints. Notice there is a **RED** end and a **WHITE** end on each pole. The **RED** ends will go into the roof pockets and the **WHITE** ends will go into the floor pockets.

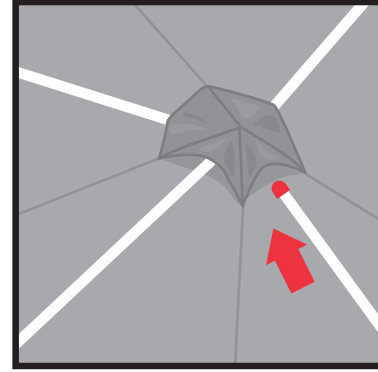

5. It is best to insert one pole at a time. Take one pole and insert the **RED** end into one of the 4 pockets in the roof.

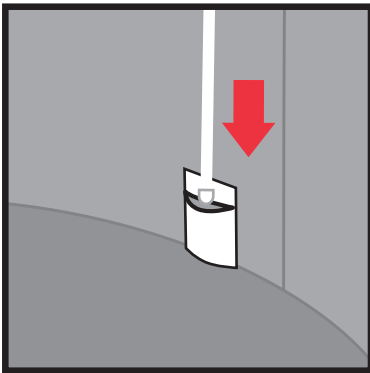

6. Locate the floor pocket that is aligned to this roof pocket and insert the **WHITE** end of the pole into the floor pocket.

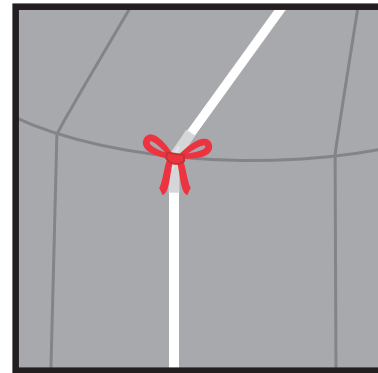

7. Now, tightly secure the pole into place with the tie located on the wall.

8. Repeat steps **5-7** with the rest of the poles.


9. Take a quick look to make sure everything is fastened and secured. If it's all good, it's now time for your little one to live like royalty!

QUICK CARE


- Make a mess? No problem! Simply wipe clean with a damp cloth.
- Always ensure the play tent is dry prior to storing.
- Remember to always use indoors and refrain from overexposure to the sunlight, as this may cause premature failure or material fatigue.

SAFE PLAY: TENT TAKE DOWN & STORAGE


Play time over? Ready to pack it up?

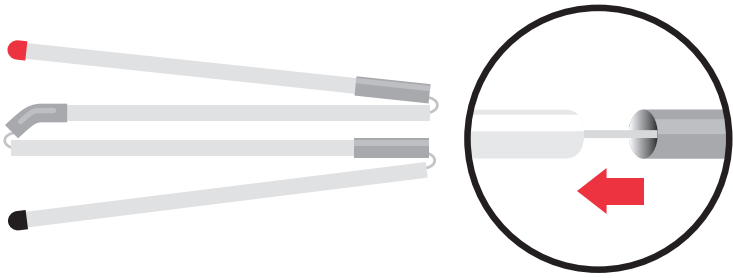


1. First remove all of the poles and disassemble them by lightly pulling each piece apart at the metal connection point. Place them in the bag they came in.

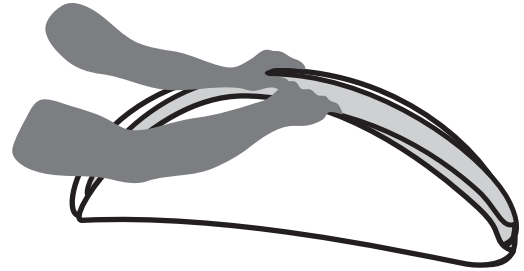

2. Grab both opposite ends of the tent and pull them together toward the center. It should look like a taco or cannoli. Your right hand should be just below your left.

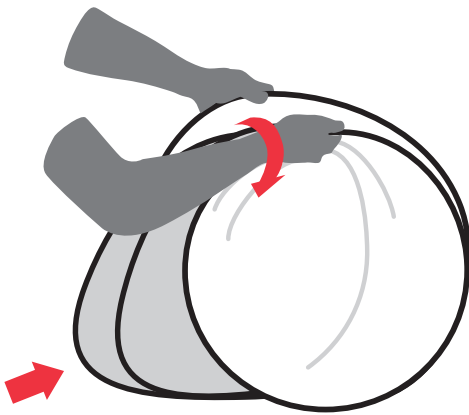

3. Rotate your right wrist clockwise until your hand is upside down. Keep an eye on the bottom left side of the tent - it'll start to coil.

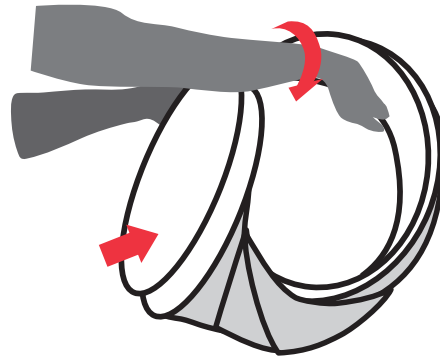

4. As your wrist rotates to the upside down position, guide the bottom left side of the tent to coil over the top of the coils in your right hand.



5. With both hands, bunch the entire tent together into a circle and place it back into the box along with the poles until the next play time!



6. Having a bit of trouble? Scan this QR code with your phone camera or visit chuckleandroar.com/castle-play-tent for a video on how to fold up the tent.